

Troll'n Motor Operation


Operation of Trolling Motors

To position the motors for trolling use, press BOW DOWN for more than five seconds on the trim tab switch. This will fully extend both actuators so the motors are parallel with the plane of the hull.



To begin use with the trolling motors turn the control box ON by flipping the single toggle switch. When the system is activated, you may operate the motors with the foot control that plugs into the control box wire harness.

Direction


The Troll'n Tab system maneuvers the boat by controlling the direction and the amount of thrust from each of the trolling motors. Pressing down on the heel of the foot control will steer the boat to the left. When the heel is pressed down the starboard motor will thrust forward and the port motor will thrust in reverse. Pressing down on the toe of the foot pedal will steer the boat to the right. When the toe is pressed down, the port motor will thrust forward and the starboard motor will thrust in reverse. The amount of thrust and the direction of thrust will gradually change from one motor to the other the further the foot control is pressed down. When the foot control is pressed down all the way to either the toe or heel, the trolling motors will be at equal thrust levels, one motor pushing forward, the other pushing in reverse. To track in a straight line, the foot pedal has a center position, which is calibrated to equal the amount of thrust and the direction of each motor.

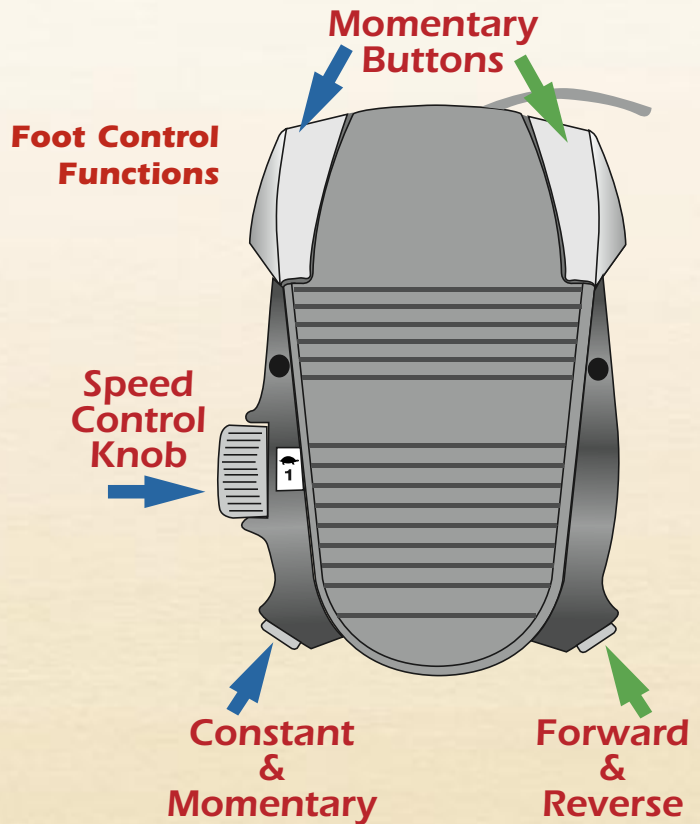

Straight Center Foot Pedal

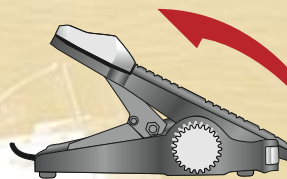

Turn Left
Heel Down

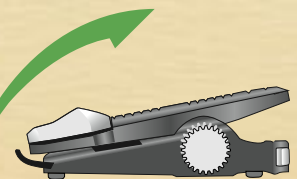

Turn Right
Toe Down




Press BOW DOWN for more than 5 seconds to position trolling motors for use.

Troll'n Motor Maneuvering

Speed


The speed of the motor can be adjusted to the desired speed by rolling the speed control knob on the left side of the foot control. This is a variable speed system so it offers a full range of thrust levels. This range is marked 1 through 10. Position 1 is marked on the knob by a turtle for the lowest thrust level and a rabbit for the highest thrust marks position 10. Use your foot to roll the speed control knob to the desired setting.

Speed Control Knob

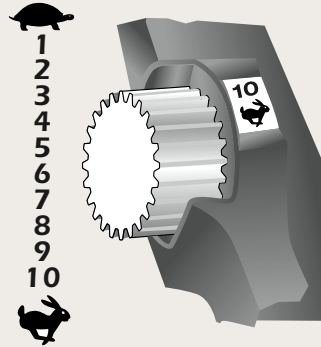

Momentary Mode

When the main control box is turned on, the foot control will begin in the momentary mode. Each time one of the gray momentary buttons is pressed, the motors will activate; when released the motors will stop. When activated, the motors will run at the speed controlled by the setting of the speed control knob.

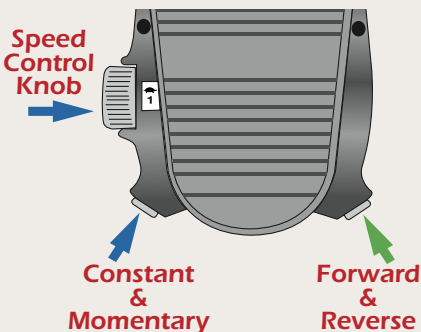

Constant Mode

To set the foot control to the constant mode, press the small gray button on the left at the base of the foot control one time. This mode allows the motors to run constantly at the speed selected on the speed control knob.

Constant Mode Steering Adjustments

When the foot control is set in the constant mode it is possible to make small directional adjustments. To make each adjustment, press the right or left gray momentary buttons one time. This will allow the boat to track 5 percent in the desired direction. If one of the two momentary buttons is pressed and held down, the boat will continue to go in that direction until the button is released or the opposite button is pressed.


Forward and Reverse

When the main control box is turned on, the foot control will begin in forward. To set the foot control to the reverse mode, press the small gray button on the right at the base of the foot control, one time. This will reverse all of the functions described above. This setting is most effective and used most often when the foot control is set at the center position. This function is helpful to back up out of tight areas and maneuver away from obstructions.

On the Water

Lenco Marine would like your first experience with your new Troll'n Tab system to be enjoyable. Please take your time and walk through the previously mentioned settings. You will learn how to calibrate the motors in the momentary, constant and straight ahead positions to maximize the systems full potential.

© Lenco Marine, Inc. 2004

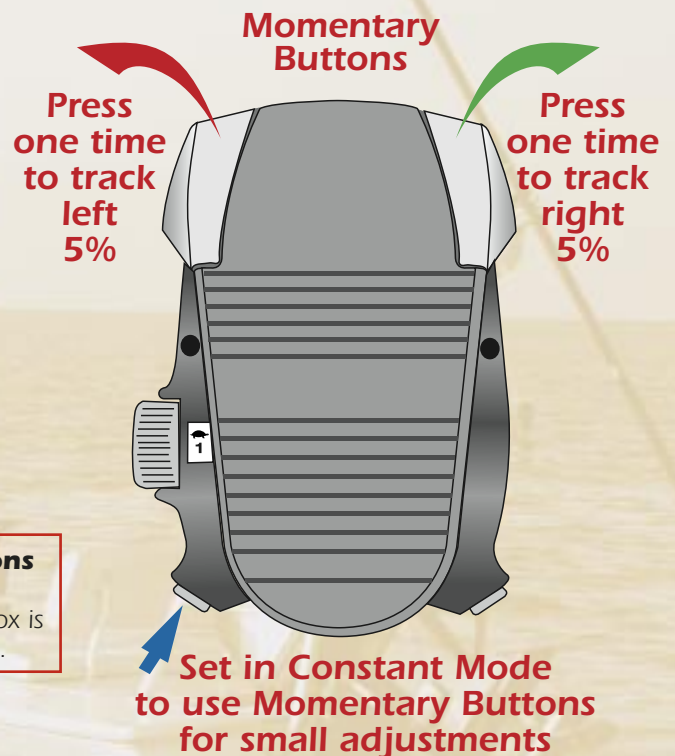

Special Recommendations for Troll'n Tabs

Make sure that the control box is switched to OFF after use.

Tackle By Dy & Outfitters
RR 1, 22 Laukka Lane
Kaministiquia, Ontario,
Canada, P0T1X0
Phone/fax: 807-933-4946
Toll Free Phone/fax: 1-866-251-5015
E-mail: pontons@tackle-by-dy.com
Web: www.tackle-by-dy.com